

## FS-M1P

Fiber Amplifier, Cable Type, Main Unit, PNP

C € ..., SAL ...

\*Please note that accessories depicted in the image are for illustrative purposes only and may not be included with the product.

This model has been discontinued.
Compliance with the certification standard is ensured as of the time of shipment from our company.

Recommended Replaceable Products: Digital Fiber Optic Sensor - FS-N40 series

## Specifications

| Model                                 |                      | FS-M1P  |
|---------------------------------------|----------------------|---|
| Туре                                  |                      | Main unit   |
| Output                                |                      | PNP   |
| Light source                          |                      | Red LED   |
| Sensitivity adjustment/Mode selection |                      | 8-turn trimmer (with indicator), FINE/TURBO (switch-selectable)                           |
| Response time                         |                      | 250 μs (FINE) /500 μs (TURBO)   |
| Operation mode                        |                      | LIGHT-ON/DARK-ON (switch-selectable)  |
| Indicator lamp                        |                      | Output: Red LED<br>Stable operation: Green LED  |
| Timer function                        |                      | ON-delay: 40 ms/OFF-delay: 40 ms/Timer OFF (switch-selectable)                            |
| Input                                 |                      | —   |
| Control output                        |                      | PNP open-collector 100 mA max. (40 VDC max.), Residual voltage: 1 V max.                  |
| Stability output                      |                      | PNP open-collector 50 mA max. (40 VDC max.), Residual voltage: 1 V max.*1                 |
| Protection circuit                    |                      | Reversed polarity protection, over-current protection, surge absorber                     |
| Unit expansion                        |                      | Up to 16 expansion units can be connected (a total of 17 units).*2                        |
| Mutual interference suppression       |                      | FINE : 4, TURBO/SUPER: 8  |
| Rating                                | Power voltage        | 12 to 24 VDC ±10 %, Ripple (P-P) 10 % or less   |
|                                       | Current consumption  | 35 mA or less   |
| Environmental resistance              | Ambient light        | Incandescent lamp: 10,000 lux max., Sunlight: 20,000 lux max.                             |
|                                       | Ambient temperature  | -10 to +55 °C 14 to 131 °F (No freezing)*3  |
|                                       | Relative humidity    | 35 to 85 % RH (No condensation)   |
|                                       | Vibration resistance | 10 to 55 Hz, Double amplitude 1.5 mm 0.06", 2 hours in each of the X, Y, and Z directions |
|                                       | Shock resistance     | 500 m/s <sup>2</sup> , 3 times in each of the X, Y, and Z directions                      |
| Case material                         |                      | Polycarbonate   |
| Weight                                |                      | Approx. 75 g  |

\*1 Only the FS-T1 and FS-M1 can provide stability outputs.

\*<sup>2</sup> If more than one unit is used together, the ambient temperature varies with the conditions below. Mount the units on the DIN rail with mounting brackets and check that the output current is 20 mA or less.

3 to 10 Units: -10 to 50°C 14 to 122°F, 11 to 16 Units: -10 to 45°C 14 to 113°F

\*3 When several units are connected, the ambient temperature requirement varies depending on the total number of units connected.




When 3 to 10 units: -10 to +50  $^{\circ}$ C 14 to 122  $^{\circ}$ F When 11 to 16 units: -10 to +45  $^{\circ}$ C 14 to 113  $^{\circ}$ F

When connecting several units, be sure to mount the units to a metallic DIN rail. Make sure that the output current does not exceed 20 mA.

# Dimensions

\* Download CAD file or product manual for larger image/text and more detail.

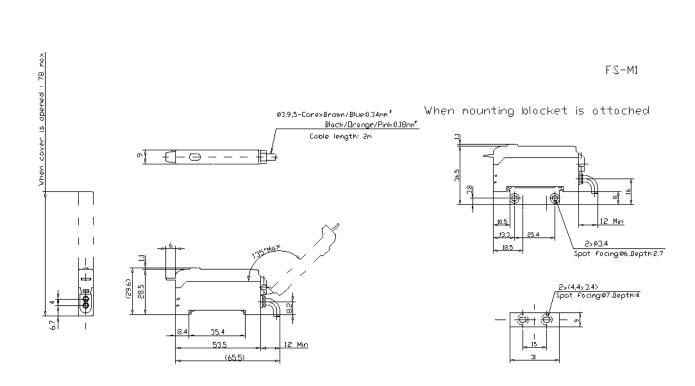




## I/O Circuit Connection diagram

\* Download CAD file or product manual for larger image/text and more detail.

#### I/O Circuit

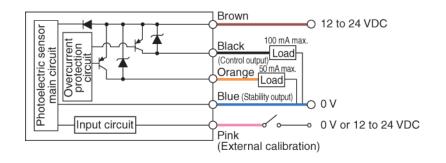

\* The FS-M1P does not have a pink cable (for external calibration).

When the stability output is not used, cut the orange cable at the base, or connect this cable to the 0 V terminal of the power supply.