

Your Partner in Industrial Excellence

Enhance Your Production with Advanced Automation Solutions

Discover a wide range of high-quality industrial automation products and engineering services tailored to meet your specific needs. Our selection and expert services are designed to provide reliable, efficient solutions and support your operational goals.

For corporate inquiries, please contact us for detailed information.



Visit industify.com for more information, contact our support team, or email us at sales@industify.com

TCD210043AB Autonics

Rectangular Photoelectric Sensor



BJ Series (Connector type)

PRODUCT MANUAL

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- Compact size: W 10.6 \times H 32 \times L 20 mm
- IP67 protection rating (IEC standard)
- Adjuster for selecting Light ON/Dark ON mode
- $\bullet \ \, {\sf Built-in} \ {\sf sensitivity} \ {\sf adjustment} \ {\sf adjuster}$
- $\bullet \ \ \text{Reverse power protection circuit, output short overcurrent protection circuit}$
- Mutual interference prevention function
- Excellent noise immunity and minimal influence from ambient light
- $\bullet \ \ \mbox{High performance lens with long sensing distance}$
- Long sensing distance: Through-beam type 15 m, diffuse reflective type 1 m, polarized retroreflective type 3 m (MS-2A)
- M.S.R. (Mirror Surface Rejection) function (Polarized retroreflective type)

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- <u>M</u> symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
 Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.

Failure to follow this instruction may result in explosion or fire.

03. Do not disassemble or modify the unit.

05. Check 'Connections' before wiring.

Failure to follow this instruction may result in fire.

- Do not connect, repair, or inspect the unit while connected to a power source.
 - Failure to follow this instruction may result in fire.

Failure to follow this instruction may result in fire.

▲ Caution Failure to follow instructions may result in injury or product damage.

01. Use the unit within the rated specifications.

Failure to follow this instruction may result in fire or product damage.

02. Use a dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- When connecting an inductive load such as DC relay or solenoid valve to the output, remove surge by using diodes or varistors.
- Use the product after 0.5 sec of the power input.
 When using a separate power supply for the sensor and load, supply power to the sensor first.
- The power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep it away from high voltage lines or power lines to prevent surge and inductive noise.
- When using switching mode power supply (SMPS), ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.
- When using a sensor with a noise-generating equipment (e.g., switching regulator, inverter, and servo motor), ground F.G. terminal of the equipment.
- This unit may be used in the following environments.
- Indoors (in the environment condition rated in 'Specifications')
- Altitude max. 2,000 m
- Pollution degree 3
- Installation category II

Product Components

| Sensing type | Through-beam | Polarized retroreflective | Diffuse reflective | | | | |
|------------------------|-----------------------------|---------------------------|--------------------|--|--|--|--|
| Product components | Product, instruction manual | | | | | | |
| Reflector | - | MS-2A | = | | | | |
| Adjustment screwdriver | 1 | 1 | 1 | | | | |
| Bracket B | 2 | 1 | 1 | | | | |
| M3 bolt / nut | 4 | 2 | 2 | | | | |

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

| BJ | 0 | - | 2 | 3 | 4 | - | 6 | - | 6 | |
|----|---|---|---|---|---|---|---|---|---|--|

Sensing distance

Number: Sensing distance (unit: mm) Number+M: Sensing distance (unit: m)

Sensing type

T: Through-beam P: Polarized retroreflective D: Diffuse reflective

O Power supply

D: 12 24 VDC==

Output

T: Solid state (transistor)

6 Connection

C: Connector type

Control output


No mark: NPN open collector output P: PNP open collector output

Sold Separately

- · Bracket A
- Retroreflective tape: MST Series M8 connector cable: CID(H)408 □, CLD(H)408 □

Cautions during Installation

- · Be sure to install this product by following the usage environment, location, and specified ratings. Consider the listed conditions below
- Installation environment and background (reflected light)
- Sensing distance and sensing target
- Direction of target's movement
- Characteristic curves
- · When installing multiple sensors closely, it may result in malfunction due to mutual interference.
- For installation, tighten the screw with a torque of 0.5 N m. Mount the brackets correctly to prevent the twisting of the sensor's optical axis.
- Do not impact with a hard object or bend the cable excessively. That could decrease the product's water resistance.
- \bullet Use this product after the test. Check whether the indicator works appropriately for the positions of the detectable object

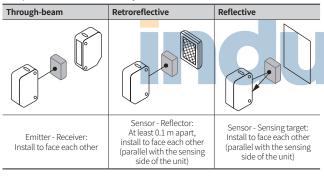


Setting Operation Mode

- · Be sure to set the mode before power-on.
- · Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage.

| L: Light ON mode | D: Dark ON mode |
|------------------|-----------------|
| | |

Operation Timing Chart and Indicators

■ Light ON mode

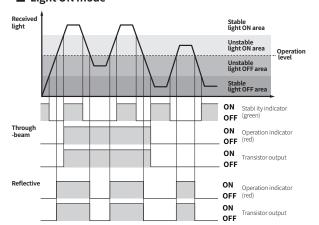

- In Dark ON mode, the waveforms are reversed.
 Operation indicator and transistor output differ from the sensing method.

Connections




| Pin | Color | Function |
|-----|-------|----------|
| 1 | Brown | +V |
| 2 | - | - |
| 3 | Blue | 0 V |
| 4 | Black | OUT |


- Connector pin is N.C (not connected) terminal for the emitter
- Refer to 'Circuit' for the load connection.

Circuit

■ NPN open collector output



■ PNP open collector output



- OCP (over current protection), SCP (short circuit protection)
 If short circuit the control output terminal or supply current over the rated specification, normal control signal is not output due to the protection circuit.


Sensitivity Adjustment

- Set the adjuster for stable Light ON area, minimizing the effect of the installation environment.
- Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage
- The stens below are based on Light ON mode

| The steps below are based on Light ON mode. | | | | | | | |
|---|-------------|-------------|--|--|--|--|--|
| STEP | Status | Description | Description | | | | |
| 01 | Received | MIN MAX | Turn the adjuster from MIN to MAX sensitivity and check the position (A) where the operation indicator activates under the light ON area. | | | | |
| 02 | Interrupted | MIN B MAX | Turn the adjuster from (A) to MAX and check the position (B) where the operation indicator activates under the light OFF area. If the operation indicator does NOT activate at the MAX (maximum sensitivity): MAX = (B). | | | | |
| 03 | - | A B MAX | Set the adjuster at the mid position between (A) and (B) for optimal sensitivity. | | | | |
| | | | | | | | |

Dimensions


• Unit: mm, For the detailed drawings, follow the Autonics website.

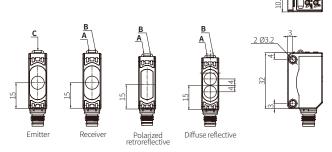



| Α | Operation indicator (red) | С | Power indicator (green) |
|---|-----------------------------|---|-------------------------|
| В | Stability indicator (green) | | |

■ Reflector (MS-2A)

Bracket B (BJ BRACKET B)

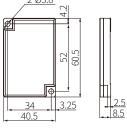

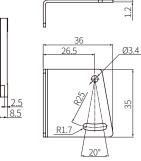



Specifications


| Model | BJ□-TD | Г-С-□ | BJ3M-PDT-C-□ | BJ□-DDT | -c-🗆 | |
|--------------------------------|--------------------|------------------|---------------------------------|--|----------------|----------|
| Sensing type | hrough | beam | Polarized retroreflective | Diffuse reflective | | |
| Sensing distance | distance 10 m 15 m | | 3 m °) | 100 mm | 300 mm | 1 m |
| Sensing target | Opaque materials | | Opaque materials | Opaque materials, translucent materials | | |
| Min. sensing target | ≥ Ø 12 mm | | ≥ Ø 75 mm | | | |
| Hysteresis | | | | ≤ 20% of sensing distance | | |
| Response time | ≤ 1 ms | | ≤ 1 ms | ≤1 ms | | |
| Light source | Red | Infrared | Red | Infrared | Red | Infrared |
| Peak emission wavelength | 660 nm | 850 nm | 660 nm | 850 nm | 660 nm | 850 nm |
| Sensitivity adjustment | YES (Adju | ster) | YES (Adjuster) | YES (Adjuster) | | |
| Mutual interference prevention | | | YES | YES | | |
| Operation mode | Light ON | mode Dark O | N mode selectable (Adjuste | er) | | |
| Indicator | Operation | n indicator (red |), stability indicator (green), | power indic | ator (green) ' | 34) |
| Approval | C€₩E | | C€ ₩ EME | C€ KEHL | | |
| Unit weight (packaged) | ≈ 20 g (≈ | ≠ 45 g) | ≈ 30 g (≈ 55 g) | pprox 10 g ($pprox$ | 35 g) | |

- 01) Reflector (MS 2A)
- 02) Non glossy white paper 100 \times 100 mm
- 03) Non glossy white paper 300 × 300 mm 04) Only for the emitter

| Power supply | 12 24 VDC= ±10 % (ripple P P: ≤ 10%) | | | | | | |
|--------------------------------|--|--|--|--|--|--|--|
| Current consumption | It depends on the sensing type | | | | | | |
| hrough beam | Emitter: ≤ 20 mA, receiver: ≤ 20 mA | | | | | | |
| Reflective | ≤ 30 mA | | | | | | |
| Control output | NPN open collector output / PNP open collector output Model | | | | | | |
| Load voltage | ≤ 26.4 VDC== | | | | | | |
| Load current | ≤ 100 mA | | | | | | |
| Residual voltage | NPN: ≤ 1 VDC=, PNP: ≤ 2.5 VDC= | | | | | | |
| Protection circuit | Reverse power protection circuit, output short overcurrent protection circuit | | | | | | |
| Insulation resistance | \geq 20 M Ω (500 VDC= megger) | | | | | | |
| Noise immunity | ±240 VDC= the square wave noise (pulse width: 1 µs) by the noise simulator | | | | | | |
| Dielectric strength | Between the charging part and the case: 1,000 VAC ~ 50/60 Hz for 1 min | | | | | | |
| Vibration | 1.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 2 hours | | | | | | |
| Shock | 500 m/s² (≈ 50 G) in each X, Y, Z direction for 3 times | | | | | | |
| Ambient illuminance (receiver) | Sunlight: ≤ 11,000 x, incandescent lamp: ≤ 3,000 x | | | | | | |
| Ambient temperature | 25 to 55 °C, storage: 40 to 70 °C (no freezing or condensation) | | | | | | |
| Ambient humidity | 35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation) | | | | | | |
| Protection rating | IP67 (IEC standard) | | | | | | |
| Connection | Connector type | | | | | | |
| Connector | M84 pin plug type | | | | | | |
| Material | Case: PC+ABS, CAP: PC, sensing part: PMMA, bracket: SUS304, bolt: SCM, nut: SCM, sleeve: Brass, Ni plate | | | | | | |

Sold Separately: Bracket A

 \bullet Unit: mm, For the detailed drawings, follow the Autonics website.

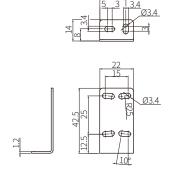

Sold Separately: M8 Connector Cable

• For detailed information, refer to the 'M8/M12 Connector Cable' manual.


| Appearance | Power | Connector 1 | Connector 2 | Length | Feature | Model |
|------------|-------|---|-------------|--------|---------------|-----------|
| | DC | M8 (Socket- | 4 | 2 m | D) (C | CID408-2 |
| | DC | Female) 4-pin | 4-wire | 5 m | PVC | CID408-5 |
| | DC | M8 (Socket- | 4-wire | 2 m | Oil resistant | CIDH408-2 |
| | DC | Female) 4-pin | 4-wire | 5 m | PVC | CIDH408-5 |
| W | DC | M8 (Socket- Female) 4-pin, L type | 4-wire | 2 m | - PVC | CLD408-2 |
| | | | | 5 m | | CLD408-5 |
| | | M8 (Socket- Female) | | 2 m | Oil resistant | CLDH408-2 |
| | DC | 4-pin, L type | 4-wire | 5 m | PVC | CLDH408-5 |


Sold Separately: Reflector MS Series


| Appearance | Size (W × H) | Reflectance | Sensing type | Model |
|------------|--------------|-------------------------|---------------------------|-------|
| .3000 | | Typical reflectivity | Retroreflective | MS-2 |
| | 40.5 60.5 mm | Typical reflectivity | Polarized retroreflective | MS-2A |
| | | High reflectivity | Polarized retroreflective | MS-2S |
| | 81.5 60.5 mm | Typical reflectivity | Retroreflective | MS-3 |
| | 81.5 60.5 mm | High reflectivity | Polarized retroreflective | MS-3S |
| | 29.3 38 mm | Typical reflectivity | Retroreflective | MS-4 |
| | 15.4 24 mm | Typical reflectivity | Retroreflective | MS-5 |
| | 13.7 23 mm | Typical reflectivity | Retroreflective | MS-6 |

- Material: PMMA / ABS (front part / rear part)
- Installation: Bolt mounting

Dimensions

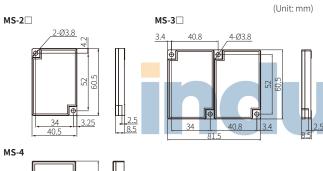





■ Cautions during Installation

- Select a reflector size that is suitable for the installation space and operating environment of the sensors.
- In general, a bigger size of the reflector results in a longer sensing distance.
- Reflectors with high reflectivity increase the sensing distance compared to typical
- The reflectance may vary depending on the operating environment for the sensors.

Sold Separately: Retroreflective Tape MST Series

| Appearance | Size | $(W \times H)$ | Approval | Packaged unit | Sensing type | Model |
|------------|------|----------------|----------|---------------|---|-----------|
| | 50 | 50 mm | EAC | 10 | Retroreflective Polarized retroreflective | MST-50-10 |
| | 100 | 100 mm | EAC | 5 | Retroreflective Polarized retroreflective | MST-100-5 |
| | 200 | 200 mm | EAC | 2 | Retroreflective Polarized retroreflective | MST-200-2 |


- Material: PMMA / PC / Acrylic (surface film / prism layer / adhesive layer) Ambient temperature: -35 to 65 °C (temperature for adhesion: 10 to 30 °C) Installation: Tape cutting (installation distance: \geq 20 mm)

Reflectance of MST Series

| Series | Sensing type | MST-50-10 | MST-100-5 | MST-200-2 |
|------------------------------|---------------------------|-----------|-----------|-----------|
| BTS | | 95% | 100% | 100% |
| BM | | 70% | 110% | 170% |
| BMS | Retroreflective | 90% | 120% | 190% |
| BEN | | 90% | 130% | 140% |
| ВХ | | 90% | 100% | 110% |
| BJ | | 40% | 60% | 100% |
| BJR | | 35% | 45% | 55% |
| ВЈХ | | 35% | 45% | 55% |
| ВН |] | 60% | 80% | 140% |
| BEN | Polarized retroreflective | 70% | 90% | 120% |
| ВХ | retrorenective | 30% | 40% | 60% |
| BRQ | | 40% | 50% | 80% |
| BRQP (plastic material type) | | 40% | 80% | 85% |
| BRQPS (side sensing type) | | 25% | 30% | 35% |

Dimensions

(Unit: mm)

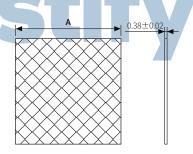


| Model | Α |
|-----------|-------|
| MST-50-10 | □ 50 |
| MST-100-5 | □ 100 |
| MST-200-2 | □ 200 |

■ Cautions during Installation


- Select a retroreflective tape that is suitable for the installation space and operating environment of the sensors.
- \bullet In general, a bigger size of retroreflective tape results in a longer sensing distance.
- \bullet Be sure to check the reflectance of the MST series for proper use.
- The reflectance may vary depending on the operating environment for the sensors.
- Before applying the tape, clean the adhesive side of the reflective tape with a dry
- Do not press or damage the surface of the retroreflective tape.
- \bullet Regularly clean the tape to maintain optimal performance, using only neutral detergents. Do not use chemical solvents.

Characteristic Curves: Through-beam Type

■ Sensing area





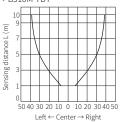


Left ← Center → Right Operation area ℓ(mm)


• BJ15M-TDT Sensing distance L (m) Left ← Center → Right Operation area ℓ (cm)

■ Emitter angle



• BJ10M-TDT




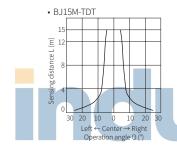

Characteristic Curves: Polarized Retroreflective Type ■ Sensing area




• BJ3M-PDT




■ Sensor angle




• BJ3M-PDT



■ Reflector angle






40 30 20 10 0 10 20 30 40 Left ← Center → Right Operation angle Θ (°)


Characteristic Curves: Diffuse Reflective Type

■ Sensing area



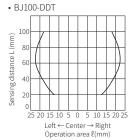

• BJ300-DDT



• BJ1M-DDT

