

industify

Your Partner in Industrial Excellence

Enhance Your Production with Advanced Automation Solutions

Discover a wide range of high-quality industrial automation products and engineering services tailored to meet your specific needs. Our selection and expert services are designed to provide reliable, efficient solutions and support your operational goals.

For corporate inquiries, please contact us for detailed information.



Visit industify.com for more information, contact our support team, or email us at sales@industify.com

Rectangular Photoelectric Sensor



BJ Series (Connector type) PRODUCT MANUAL

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- Compact size: W 10.6 × H 32 × L 20 mm
- IP67 protection rating (IEC standard)
- Adjuster for selecting Light ON/Dark ON mode
- Built-in sensitivity adjustment adjuster
- Reverse power protection circuit, output short overcurrent protection circuit
- Mutual interference prevention function
- Excellent noise immunity and minimal influence from ambient light
- High performance lens with long sensing distance
- Long sensing distance : Through-beam type 15 m, diffuse reflective type 1 m, polarized retroreflective type 3 m (MS-2A)
- M.S.R. (Mirror Surface Rejection) function (Polarized retroreflective type)

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- symbol indicates caution due to special circumstances in which hazards may occur.

Warning Failure to follow instructions may result in serious injury or death.

1. **Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)**
Failure to follow this instruction may result in personal injury, economic loss or fire.
2. **Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
3. **Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire.
4. **Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire.
5. **Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.

Caution Failure to follow instructions may result in injury or product damage.

1. **Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
2. **Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- When connecting an inductive load such as DC relay or solenoid valve to the output, remove surge by using diodes or varistors.
- Use the product after 0.5 sec of the power input.
When using a separate power supply for the sensor and load, supply power to the sensor first.
- The power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep it away from high voltage lines or power lines to prevent surge and inductive noise.
- When using switching mode power supply (SMPS), ground F.G. terminal and connect a condenser between OV and F.G. terminal to remove noise.
- When using a sensor with a noise-generating equipment (e.g., switching regulator, inverter, and servo motor), ground F.G. terminal of the equipment.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000 m
 - Pollution degree 3
 - Installation category II

Product Components

Sensing type	Through-beam	Polarized retroreflective	Diffuse reflective
Product components	Product, instruction manual		
Reflector	-	MS-2A	-
Adjustment screwdriver	1	1	1
Bracket B	2	1	1
M3 bolt / nut	4	2	2

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

BJ ① - ② ③ ④ - ⑤ - ⑥

① Sensing distance

Number: Sensing distance (unit: mm)
Number+M: Sensing distance (unit: m)

② Sensing type

T: Through-beam
P: Polarized retroreflective
D: Diffuse reflective

③ Power supply




D: 12~24 VDC

Sold Separately

- Reflector: MS Series
- Bracket A
- Retroreflective tape: MST Series
- M8 connector cable: CID(H)408 □, CLD(H)408 □

Cautions during Installation

- Be sure to install this product by following the usage environment, location, and specified ratings. Consider the listed conditions below.
 - Installation environment and background (reflected light)
 - Sensing distance and sensing target
 - Direction of target's movement
 - Characteristic curves
- When installing multiple sensors closely, it may result in malfunction due to mutual interference.
- For installation, tighten the screw with a torque of 0.5 N m. Mount the brackets correctly to prevent the twisting of the sensor's optical axis.
- Do not impact with a hard object or bend the cable excessively. That could decrease the product's water resistance.
- Use this product after the test. Check whether the indicator works appropriately for the positions of the detectable object.

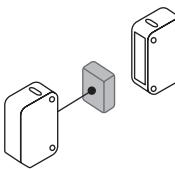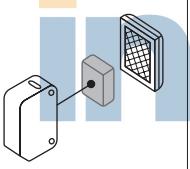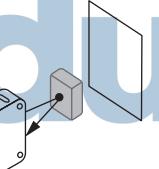Through-beam	Retroreflective	Reflective
		


Emitter - Receiver: Install to face each other

Sensor - Reflector: At least 0.1 m apart, install to face each other (parallel with the sensing side of the unit)

Sensor - Sensing target: Install to face each other (parallel with the sensing side of the unit)


Setting Operation Mode

- Be sure to set the mode before power-on.
- Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage.

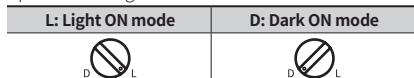

Operation Timing Chart and Indicators

■ Light ON mode

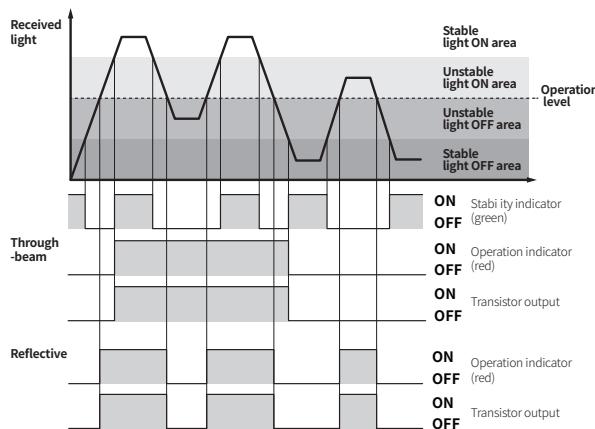

- In Dark ON mode, the waveforms are reversed.
- Operation indicator and transistor output differ from the sensing method.

Connections




Pin	Color	Function
①	Brown	+V
②	-	-
③	Blue	0V
④	Black	OUT

- Connector pin ④ is N.C (not connected) terminal for the emitter.
- Refer to 'Circuit' for the load connection.

Circuit


■ NPN open collector output

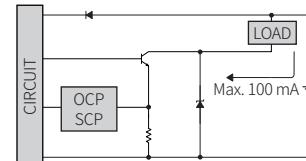

OCP (over current protection), SCP (short circuit protection)

If short circuit the control output terminal or supply current over the rated specification, normal control signal is not output due to the protection circuit.

■ PNP open collector output

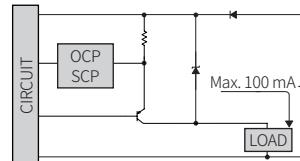


Sensitivity Adjustment

- Set the adjuster for stable Light ON area, minimizing the effect of the installation environment.
- Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage.
- The steps below are based on Light ON mode.

STEP	STATUS	DESCRIPTION
01	Received	 Turn the adjuster from MIN to MAX sensitivity and check the position (A) where the operation indicator activates under the light ON area.
02	Interrupted	 Turn the adjuster from (A) to MAX and check the position (B) where the operation indicator activates under the light OFF area. If the operation indicator does NOT activate at the MAX (maximum sensitivity): MAX = (B).
03	-	 Set the adjuster at the mid position between (A) and (B) for optimal sensitivity.


Dimensions

- Unit: mm. For the detailed drawings, follow the Autonics website.

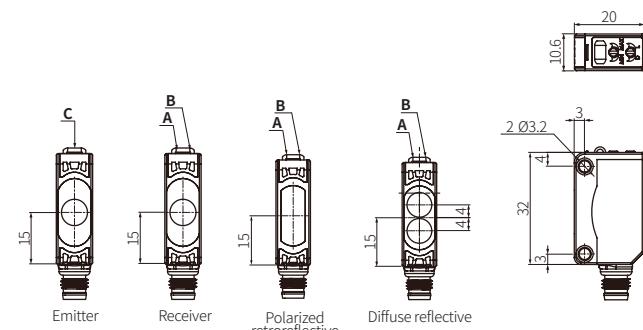


A	Operation indicator (red)	C	Power indicator (green)
B	Stability indicator (green)		

■ Reflector (MS-2A)

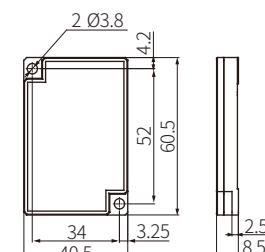

■ Bracket B (BJ BRACKET B)

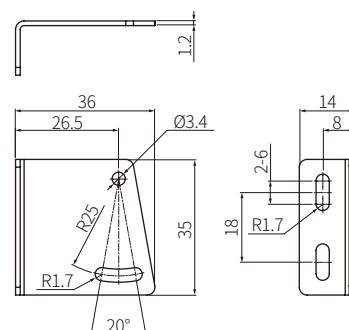

Specifications

Model	BJ□-TDT-C-□	BJ3M-PDT-C-□	BJ□-DDT-C-□
Sensing type	Through beam	Polarized retroreflective	Diffuse reflective
Sensing distance	10 m 15 m	3 m ^①	100 mm 300 mm 1 m
Sensing target	Opaque materials	Opaque materials	Opaque materials, translucent materials
Min. sensing target	≥ Ø 12 mm	≥ Ø 75 mm	
Hysteresis			≤ 20% of sensing distance
Response time	≤ 1 ms	≤ 1 ms	≤ 1 ms
Light source	Red Infrared	Red	Infrared Red Infrared
Peak emission wavelength	660 nm 850 nm	660 nm	850 nm 660 nm 850 nm
Sensitivity adjustment	YES (Adjuster)	YES (Adjuster)	YES (Adjuster)
Mutual interference prevention		YES	YES
Operation mode	Light ON mode Dark ON mode selectable (Adjuster)		
Indicator	Operation indicator (red), stability indicator (green), power indicator (green) ^④		
Approval	CE	CE	CE
Unit weight (packaged)	≈ 20 g (≈ 45 g)	≈ 30 g (≈ 55 g)	≈ 10 g (≈ 35 g)

01) Reflector (MS 2A)

02) Non glossy white paper 100 × 100 mm



03) Non glossy white paper 300 × 300 mm

04) Only for the emitter

Power supply	12-24 VDC ± 10% (ripple P-P: ≤ 10%)
Current consumption	It depends on the sensing type
Through beam	Emitter: ≤ 20 mA, receiver: ≤ 20 mA
Reflective	≤ 30 mA
Control output	NPN open collector output / PNP open collector output Model
Load voltage	≤ 26.4 VDC
Load current	≤ 100 mA
Residual voltage	NPN: ≤ 1 VDC, PNP: ≤ 2.5 VDC
Protection circuit	Reverse power protection circuit, output short overcurrent protection circuit
Insulation resistance	≥ 20 MΩ (500 VDC megger)
Noise immunity	±240 VDC: the square wave noise (pulse width: 1 µs) by the noise simulator
Dielectric strength	Between the charging part and the case: 1,000 VAC ~ 50/60 Hz for 1 min
Vibration	1.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 2 hours
Shock	500 m/s ² (≈ 50 G) in each X, Y, Z direction for 3 times
Ambient illuminance (receiver)	Sunlight: ≤ 11,000 lx, incandescent lamp: ≤ 3,000 lx
Ambient temperature	25 to 55 °C, storage: 40 to 70 °C (no freezing or condensation)
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)
Protection rating	IP67 (IEC standard)
Connection	Connector type
Connector	M8 4 pin plug type
Material	Case: PC+ABS, CAP: PC, sensing part: PMMA, bracket: SUS304, bolt: SCM, nut: SCM, sleeve: Brass, Ni plate

Sold Separately: Bracket A

- Unit: mm, For the detailed drawings, follow the Autonics website.

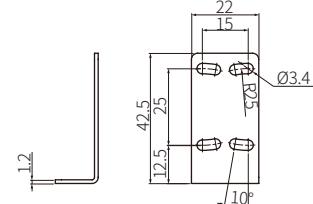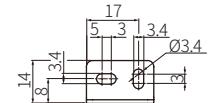

Sold Separately: M8 Connector Cable

- For detailed information, refer to the 'M8/M12 Connector Cable' manual.


Appearance	Power	Connector 1	Connector 2	Length	Feature	Model
	DC	M8 (Socket-Female) 4-pin	4-wire	2 m	PVC	CID408-2
				5 m		CID408-5
	DC	M8 (Socket-Female) 4-pin	4-wire	2 m	Oil resistant PVC	CIDH408-2
				5 m		CIDH408-5
	DC	M8 (Socket-Female) 4-pin, L type	4-wire	2 m	PVC	CLD408-2
				5 m		CLD408-5
	DC	M8 (Socket-Female) 4-pin, L type	4-wire	2 m	Oil resistant PVC	CLDH408-2
				5 m		CLDH408-5

Sold Separately: Reflector MS Series

Appearance	Size (W × H)	Reflectance	Sensing type	Model
	40.5 60.5 mm	Typical reflectivity	Retroreflective	MS-2
		Typical reflectivity	Polarized retroreflective	MS-2A
		High reflectivity	Polarized retroreflective	MS-2S
	81.5 60.5 mm	Typical reflectivity	Retroreflective	MS-3
		High reflectivity	Polarized retroreflective	MS-3S
	29.3 38 mm	Typical reflectivity	Retroreflective	MS-4
	15.4 24 mm	Typical reflectivity	Retroreflective	MS-5
	13.7 23 mm	Typical reflectivity	Retroreflective	MS-6

- Material: PMMA / ABS (front part / rear part)
- Installation: Bolt mounting

Dimensions

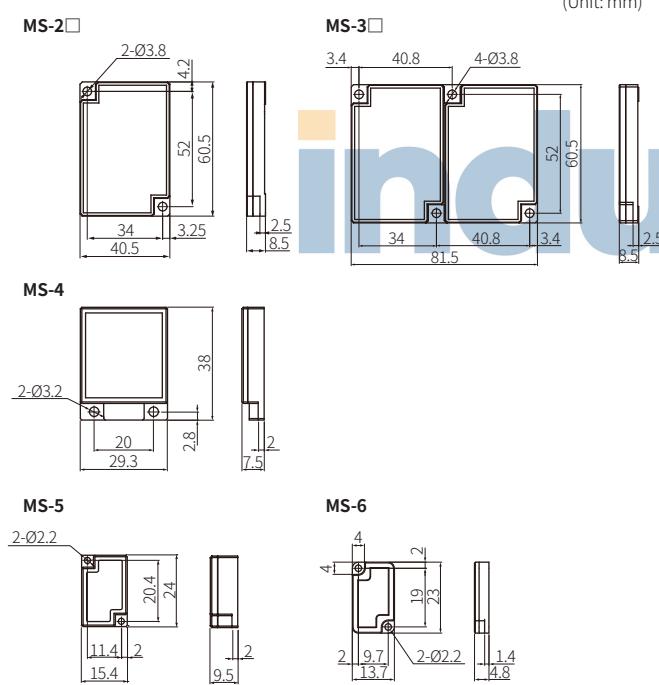

Cautions during Installation

- Select a reflector size that is suitable for the installation space and operating environment of the sensors.
- In general, a bigger size of the reflector results in a longer sensing distance.
- Reflectors with high reflectivity increase the sensing distance compared to typical reflectors.
- The reflectance may vary depending on the operating environment for the sensors.

Sold Separately: Retroreflective Tape MST Series


Appearance	Size (W × H)	Approval	Packaged unit	Sensing type	Model
	50 50 mm	ER	10	• Retroreflective • Polarized retroreflective	MST-50-10
	100 100 mm	ER	5	• Retroreflective • Polarized retroreflective	MST-100-5
	200 200 mm	ER	2	• Retroreflective • Polarized retroreflective	MST-200-2

- Material: PMMA / PC / Acrylic (surface film / prism layer / adhesive layer)
- Ambient temperature: -35 to 65 °C (temperature for adhesion: 10 to 30 °C)
- Installation: Tape cutting (installation distance: ≥ 20 mm)

Reflectance of MST Series

Series	Sensing type	MST-50-10	MST-100-5	MST-200-2
BTS	Retroreflective	95%	100%	100%
		70%	110%	170%
		90%	120%	190%
		90%	130%	140%
		90%	100%	110%
		40%	60%	100%
		35%	45%	55%
		35%	45%	55%
		60%	80%	140%
BJR	Polarized retroreflective	70%	90%	120%
		30%	40%	60%
		40%	50%	80%
		40%	80%	85%
		25%	30%	35%

Dimensions

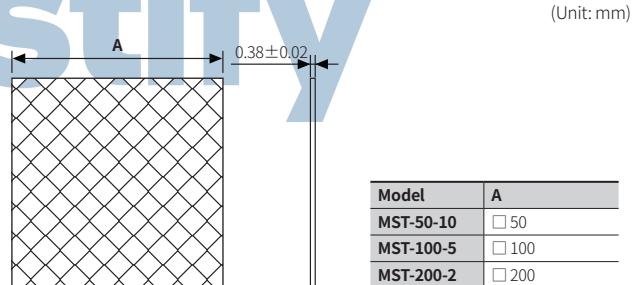


Cautions during Installation


- Select a retroreflective tape that is suitable for the installation space and operating environment of the sensors.
- In general, a bigger size of the retroreflective tape results in a longer sensing distance.
- Be sure to check the reflectance of the MST series for proper use.
- The reflectance may vary depending on the operating environment for the sensors.
- Before applying the tape, clean the adhesive side of the reflective tape with a dry cloth.
- Do not press or damage the surface of the retroreflective tape.
- Regularly clean the tape to maintain optimal performance, using only neutral detergents. Do not use chemical solvents.

Characteristic Curves: Through-beam Type


■ Sensing area

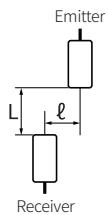


• BJ10M-TDT

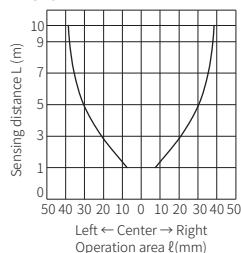


• BJ15M-TDT

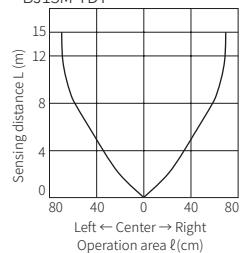


■ Emitter angle

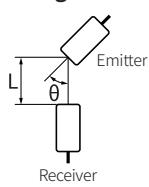

• BJ10M-TDT

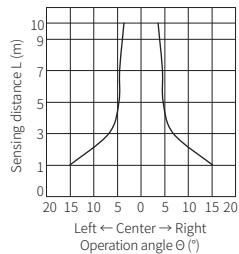


• BJ15M-TDT

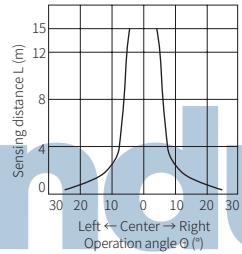


Characteristic Curves: Polarized Retroreflective Type


■ Sensing area

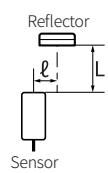


• BJ3M-PDT

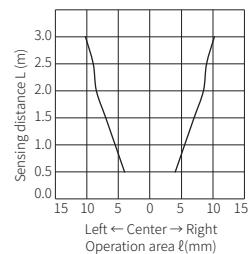


■ Sensor angle

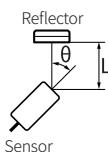


• BJ3M-PDT

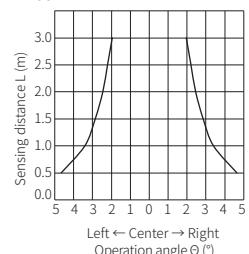

■ Reflector angle

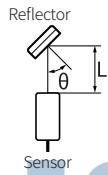


• BJ3M-PDT

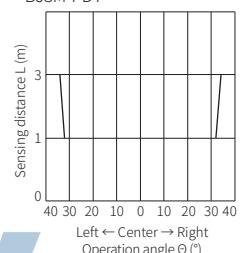


Characteristic Curves: Diffuse Reflective Type


■ Sensing area

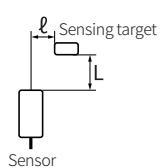

• BJ100-DDT

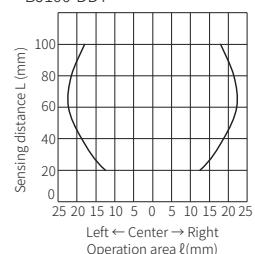

• BJ300-DDT

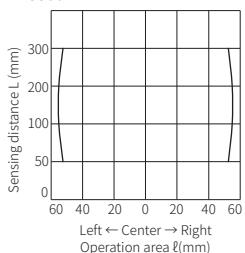

• BJ1M-DDT

