



## FS2-62

Fiber Amplifier, Cable Type, NPN



\*Please note that accessories depicted in the image are for illustrative purposes only and may not be included with the product.

ⓘ This model has been discontinued.  
Compliance with the certification standard is ensured as of the time of shipment from our company.

Contact Us: 1-888-539-3623

Recommended Replaceable Products: [Digital Fiber Optic Sensor - FS-N40 series](#)

## Specifications





Model	FS2-62	
Type	Trimmer : Ultra-long detecting distance	
Light source	Red LED	
Sensitivity adjustment	8-turn trimmer	
Response time	500 $\mu$ s	
Operation mode	LIGHT-ON/DARK-ON (switch-selectable)	
Indicator lamp	Output: Red LED Stable operation: Green LED	
Timer function	ON-delay: 40 ms/OFF-delay: 40 ms/Timer OFF (switch-selectable)	
External calibration input signal	—	
Buzzer mode	Buzzer ON when control output turns ON/Buzzer ON when alarm output turns ON/ Buzzer OFF (switch-selectable)	
Output	NPN output	
Control output	NPN open-collector 100 mA max. (40 V max.), Residual voltage 1 V max.	
Stability output	NPN open-collector 50 mA max. (40 V max.), Residual voltage 1 V max.	
Protection circuit	Reversed polarity protection, Overcurrent protection, Surge absorber	
Rating	Power voltage	12 to 24 VDC $\pm$ 10 %, Ripple (P-P) 10 % or less
	Current consumption	35 mA or less
Environmental resistance	Ambient light	Incandescent lamp: 10,000 lux max., Sunlight: 20,000 lux max.
	Ambient temperature	-10 to +55 °C <b>14 to 131 °F</b> (No freezing)
	Relative humidity	35 to 85 % RH (No condensation)
	Vibration resistance	10 to 55 Hz, Double amplitude 1.5 mm <b>0.06"</b> , 2 hours in each of the X, Y, and Z directions
	Shock resistance	500 m/s <sup>2</sup> , 3 times in each of the X, Y, and Z directions
Material	Polycarbonate	
Weight	Approx. 61 g	

# Dimensions

\* Download CAD file or product manual for larger image/text and more detail.

FS2-62


When mounting bracket is attached

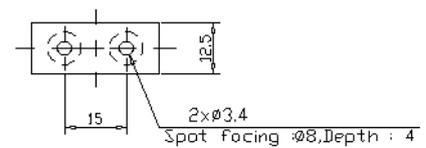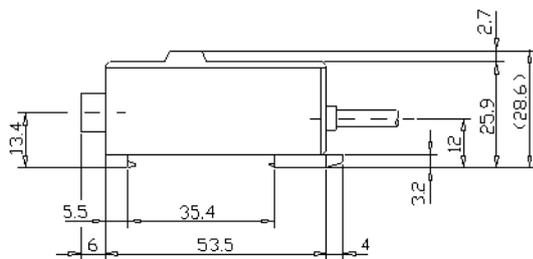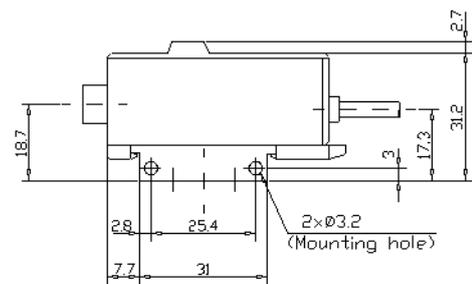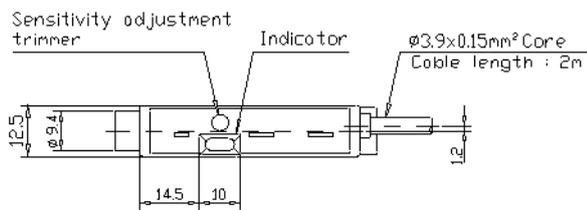

## I/O Circuit Connection diagram

\* Download CAD file or product manual for larger image/text and more detail.

When driving the load directly  
(NPN output)

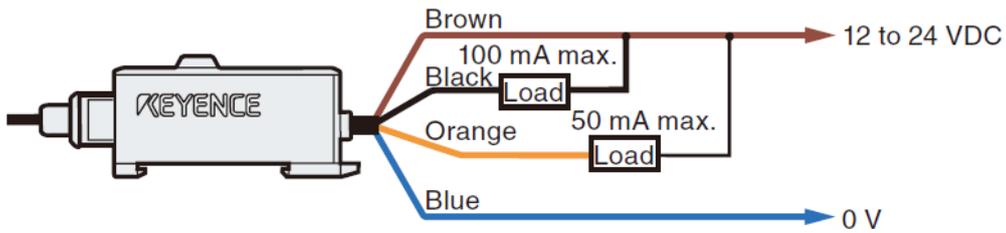

When connecting the fibre sensor to voltage input/output  
equipment (Low level when the output is on)  
(NPN output)

